

# DREAMBOX

## REMOTE CONTROL

### GETTING STARTED

- DREAMBOX Design
- Dreambox- and TV-Mode
- Learning function for TV-Mode
- Comfortable handling
- incl. 3x AAA batteries

[www.dreambox.de](http://www.dreambox.de)

#### ➤ SAFETY INSTRUCTIONS

 Please read the safety instructions completely and carefully, before using the remote control. The manufacturer takes no responsibility for damages as a result of incorrect handling.

- The device may only be operated in moderate climate.
- Do not expose the Dreambox to direct sunlight, lightning or rain.
- Cleaning: Use a slightly damp cloth without cleaning agents.
- Please be careful that the batteries of your remote control are not exposed to heat, since they might explode.

#### ➤ DISPOSAL INSTRUCTIONS

The packaging of the remote control only consists of reusable materials. Please recycle if possible.

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.



Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Please note that empty batteries and electric waste is not to be put into the regular garbage.

#### ➤ DREAMBOX REMOTE CONTROL

 Your new Dreambox remote control offers you the possibility to control your Dreambox and your TV with only one remote. At first you have to program your Dreambox remote control in order for your TV to understand the remote control's signals.

There are three ways of programming the remote:

1. Programming using a code
2. Programming using the search mode
3. Programming using the teaching function

Please read the following steps completely before you begin the programming procedure.


>

## Inserting the batteries

Before you can start using your Dreambox remote control you have to insert the 3 AAA batteries that were supplied with the device.

1. Open the battery compartment at the back of the remote.
2. Insert the 3 AAA batteries keeping the polarity (+ and -) in mind.
3. Close the battery compartment and make sure it is latched completely.


## Buttons overview

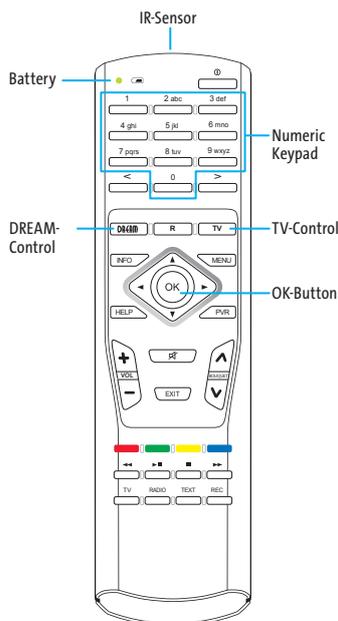

## PROGRAMMING USING A CODE

In this way of programming a manufacturer-specific code is used. (See codelist at [www.dreambox.de](http://www.dreambox.de))

1. Press the OK-Button and the TV-Control-Button for approx. 3 seconds, until the TV-Control-Button lights up red and the blue illumination of the keys is active.

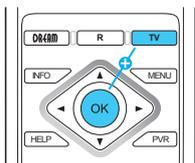

2. Enter the desired 3-digit code 000~155 using the Numeric Keypad. (The most recent codelist can be found online at [www.dreambox.de](http://www.dreambox.de)!)

If you cannot control your TV using a code, please try the next one. You can write down the code in the field on the right-hand side.

Please try another programming way described in **PROGRAMMING USING THE SEARCH MODE** if none of the supplied codes leads to success.


TV manufacturer Code

- Please note:**
- The programming will be aborted if you don't complete step 2. within 3 seconds.

## PROGRAMMING USING THE SEARCH MODE

In this way of programming your Dreambox remote control will send a different shutdown signal to your TV every second until it is turned off. Please use this mode of programming if no code was successful or your TV set manufacturer is not included in the list.

1. Press the OK-Button and the TV-Control-Button for approx. 3 seconds, until the TV-Control-Button lights up red and the blue illumination of the keys is active.

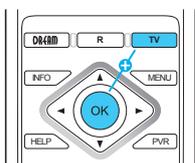

2. Enter 777 using the Numeric Keypad to start the search mode. During the process point the IR-Sensor in the direction of your TV.

The blue illumination of the keys is active and the TV-Control-Button will blink every time a shutdown signal is being send.



3. Once your TV turns off (Note: Depending on your TV this may take a few minutes) press the OK-Button right away to save the current code and to exit the search mode.

The TV-Control-Button will stop blinking and the programming has successfully finished. To exit the search mode without saving the result simply press the TV-Control-Button.


- Please note:**
- The programming will be aborted if you don't complete step 2 within 3 seconds.

- Pressing the TV-Control-Button at any time will exit the programming mode.


## PROGRAMMING USING THE LEARNING MODE

In this way of programming you can basically make a carbon copy of your TV remote control's functions onto your Dreambox remote control. Only the DREAM-Control and the TV-Control-Button cannot be assigned a function.

1. Press the OK-Button and the TV-Control-Button for approx. 3 seconds, until the TV-Control-Button lights up red and the blue illumination of the keys is active.

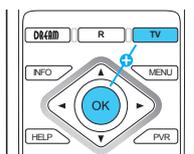


2. Press 888 on the Numeric Keypad to activate the learning mode. The blue illumination of the keys will turn off and the TV-Control-Button will light up red.

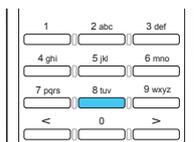

3. Press the desired button that you want to assign a function on your Dreambox remote control (excluding the DREAM-Control and TV-Control-Button).

The TV-Control-Button will shortly blink red 3 times and wait for a signal from the other remote control.

4. Place the Dreambox remote control and your TV remote control facing each other with a distance of about 3-5 cm as shown in the picture right.

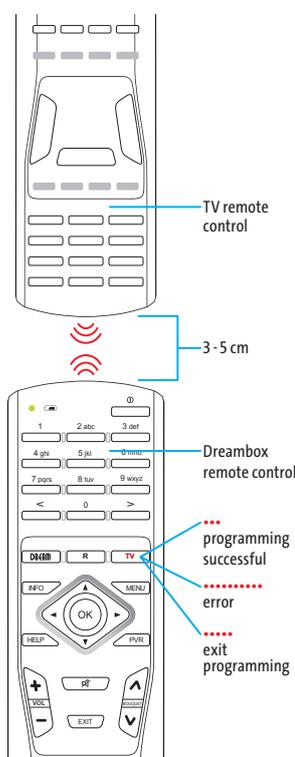

5. Press the desired button on your TV remote control for 2-3 seconds. Once the signal has been received, the red illumination of the TV-Control-Button will disappear and blink 3 times afterwards if the programming was successful or 10 times if

an error occurred. You can let go of the button now.

6. Repeat the process from step 3, if you want to program another button or if an error occurred.

7. Press the TV-Control-Button to exit the learning function. The button will blink 5 times and the illumination will disappear.

### Please note:

- The programming will be aborted if you don't complete step 2 within 3 seconds.

- The programming will be aborted if you don't complete step 5 within 6 seconds.

- Pressing the TV-Control-Button at any time will exit the learning function.

## DREAMBOX-MODE AND TV-MODE

### Dreambox-Mode

Press the DREAM-Control-Button to activate the remote's Dreambox-Mode.

Make use of the two DIP switches in the battery compartment if you want to use more than one Dreambox in a room.

In order to e.g. steer a DM8000 HD PVR, both DIP switches must be brought into the position „12“.

### TV-Mode

Pressing the TV-Control-Button will put your remote into TV-Mode using the most recently entered code. You can now use the Dreambox remote control instead of your TV remote control to control your TV.

## KEY ILLUMINATION

- Pressing the DREAM-Control-Button will make it light up red for 3 seconds. The illumination will disappear right away when you press another button in this duration.

- Pressing the TV-Control-Button will make it light up red for 3 seconds. The illumination will disappear right away when you press another button in this duration.

- Pressing any other button (except DREAM-/TV-Control-Button) will activate the blue illumination of the keys for 10 seconds.

## TECHNICAL DATA

Dimensions: 19,5 x 5,5 x 2 cm (L x B x H)

Weight: 130g (without batteries)

Batteries 3x AAA